

LED Wall Lamp

Instruction

To Users


- ※ Thank you for choosing our product
- ※ Before using, please read the instruction carefully and keep it for possible using in the future

Notes:


- ※ This LED Wall lamp includes LED chip, constant current driver.
- ※ The real power is the 90-110% of the label power.
- ※ Before connecting the fixture, please make sure the power is cut off.
After making sure the wires are connected in the right way, please turn on the power.
- ※ Don't use the fixture against of the fire regulation. Make sure the distance at least 500mm from the surfaced ring to the illuminated objects.
- ※ Don't fix the lamp on the combustible ceiling and the easy flexible and damaged ceiling.
- ※ On the fixing area, it's surface should be stressed more than 4 times weight of the fixture.
- ※ "⚠️" The fixture can't be covered by the thermal insulation material in any case.
- ※ The chip of this fixture can't be replaced. When the chip damaged, the whole fixture damaged too.
- ※ The fixture working environment: Temp: -10°C-+40°C; Humidity: =80%
- ※ Biohazard: RG0/RG1
- ※ Please cut off the power promptly, if any fixture anomaly.
And contact our salesman or local electrician

Fixture Installation

 
1. Attach the back cover to the wall with self-actuating screws.

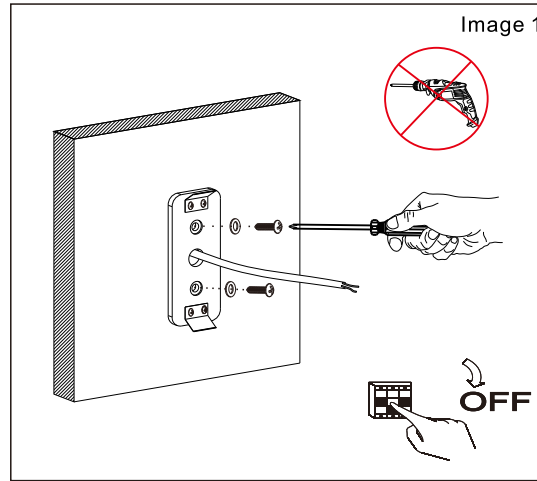

 2. Turn off the main power and connect the wire of the fixture.

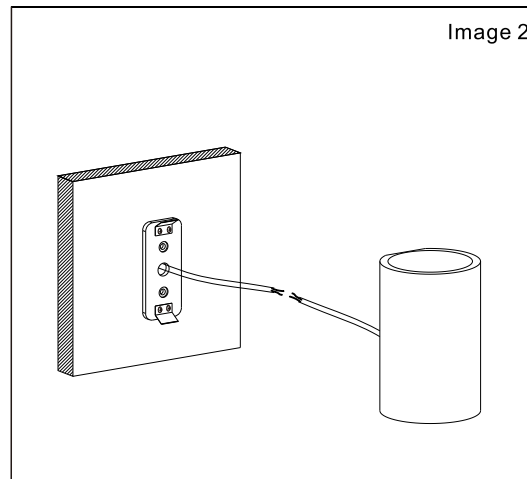

 3. Fix the back cover to the lamp body with a gimme screw.

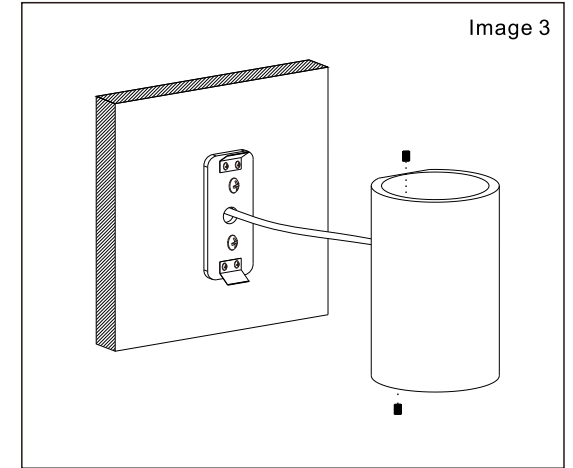

4. Adjusting the fixture to a certain beam angle (for adjustable beam angle version only)

